

# XU/XV-1000 Series User Manual



This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

**TEKK** International Inc.

www.Tekk-Radios.com

\* This User manual subject to change according to XU/XV-1000 Series Portable Radio without notice.

Printed in Korea. 200808

**TEKK** International Inc.

# Table of Contents

1. Precautions .....	1
2. Features .....	2
3. Appearance of XU/XV-1000 Series Radio .....	3
4. Operating XU/XV-1000 Series Radio .....	4
5. Basic Operation of XU/XV-1000 Series Radio .....	5
6. Charging the Battery .....	7
7. Operating Instructions of XU/XV-1000 Series Radio .....	9

Thank you for your purchase of the XU/XV-1000 Series Radio.

- 1. When using the Radio, please read the enclosed user guide in details.
- 2. The functions and specifications are subject to be changed without notice for improvement of the Radio performance.



Radio



Battery Pack



Adaptor



Charger



Antenna



Belt Clip



User Manual

Components could be changed by buyer request.

## 1. Precautions



Warning

Don't remove the antenna from the Radio or don't transform the antenna or don't make any change on the antenna. The strong electronic wave to be emitted from the Radio can have an effect on the performance of the Radio and can cause the Radio to have a defect.



Warning

Don't disassemble or reorganize the Radio. The disassembly or reorganization will be causes of defect or malfunction and it will be impossible to make repair afterward. Also, a punishment can be made by law.



Warning

Don't use the other frequency except for the permitted frequency in order not to be punished by law.



Caution

- Don't give an excessive shock to the Radio.
- Don't place the Radio where the direct sunlight and/or the high temperature occurs.
- If the Radio is placed for a long time in car in summer, the hot temperature in the car may cause an explosion of battery.
- Sharp substance and/or an excessive shock may cause damage to the battery.



Warning

In case of the area that medical equipments are being used, please use the Radio after discussion with the equipment maker or the related doctor.



Caution

Please don't use the Radio at the place where computer or other electric/ electronic devices are being used, because the strong electronic wave from the Radio can have an effect on the equipments.



Warning

- Please keep the Radio away at least 1inch from the body.
- If the outside surface of antenna gets stripped out, it can make a burn on the skin.
- If you contact a conductive metal to battery terminal, a heat can be made and it may cause fire, explosion and burn. Especially, please be careful when putting the battery in a pocket or a bag.
- When using an earphone, please don't listen to the sound at a high level. The high sound may have a bad effect on your ear.

## 2. Features

The XU/XV-1000 series Radio is developed to be user-friendly and compact design, to have various features and to use at the construction / industrial / public areas for the safety & convenience of users.

The followings are the main features of the XU/XV-1000 Series Radio.

- 16 Groups and 512 Channels are selectable.
- Call guard Squelch of standardized 53 CTCSS / 208 DCS
- Frequency inverter type of Scramble function
- Compander function
- Dual Tone Modulation Frequency (DTMF)
- Normal Scan / Priority Scan
- VOX
- 2 Tone / 5 Tone
- BCL / BCLO
- Time-Out Timer (TOT)
- Monitor
- 1Watt Speaker Power
- PLL synthesizer type
- DC+7.4V Li-ion/ 2,400 mAH high capacity Battery
- Wireless Repeater function for expansion of talk range
- EMERGENCY / SIREN
- 5 step Squelch control using RSSI.
- Lone Worker
- Remote Radio Stun / Unstun(Use 5 tone)



### 3. Appearance of XU/XV-1000 Series Radio

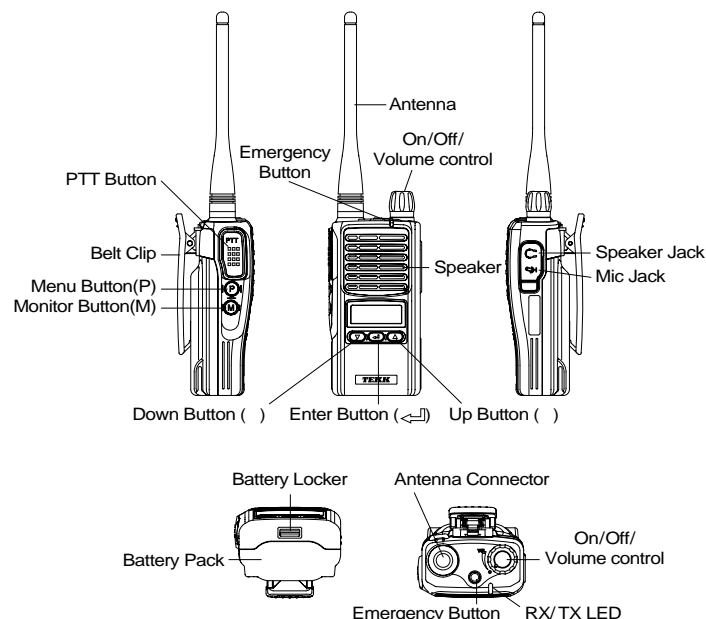


figure 3-1) Appearance of XU/XV-1000 Series Radio

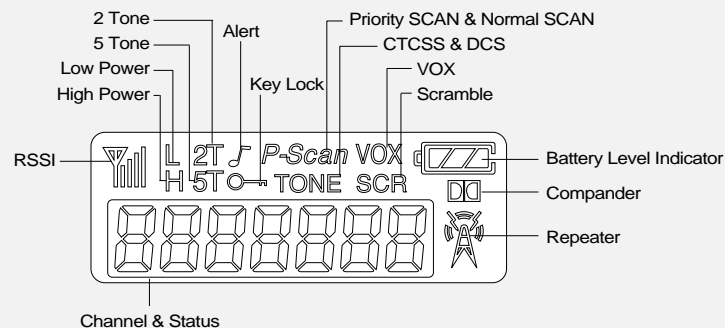


figure 3-2) XU/XV-1000 Series LCD Indication

### 4. Operating XU/XV-1000 Series Radio

#### 1 On/Off/Volume Control

Turns the radio on and off and adjusts audio volume level.


#### 2 PTT Button(Push-To-Talk Button)

Radio transmission button. It is recommended to talk 5~10cm away from the micro phone for the best voice communication.

#### 3 Menu Button(P, Program Menu Button)

Enter into Menu mode by pressing the Menu button (P) for 2 seconds.

The sequence of menu mode is as follows.

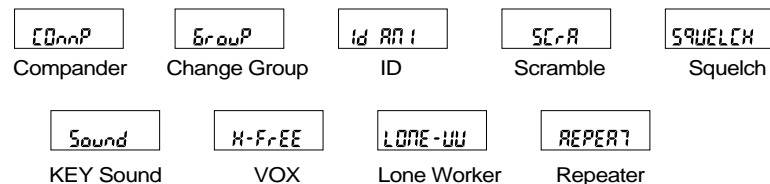

#### 4 Monitor Button(M)

The monitor mode is enabled and disabled by pressing the Monitor button (M) on the side.

Normal Mode : During pressing the Monitor button(M) for about 2 seconds, it is possible to check the receiving status.

Continuous Mode : During pressing the Monitor button(M) for more than 2 seconds, the Radio will make a "Beep" tone, which means the monitor function is maintained and if you press the Monitor button(M) again, the monitor function will be released.

#### 5 Emergency Button

In case of emergency situation, if you press the Emergency button, a siren sound will be heard through the speaker in the Radio and the Radio will transmit the emergency signal to the party through the emergency channel.

#### 6 Channel Buttons( , )

Channel Buttons( , ) have 3 functions as shown in following.

Channel buttons( , ) are to change channels.

Channel buttons( , ) are to select menu at menu mode.

Channel buttons( , ) are to change transmission power. By pressing Up button( ) while PTT button is being pressed, the user can select "H"(High Power), or by pressing Down button( ), the user can select "L"(Low Power).

## 7 Accessory Connector

The Accessory Connector is used when using an external speaker microphone or doing PC programming or making the Cloning or using as a Repeater.

## 8 RX /TX Led

This LED is a lamp indicating the current status of the Radio and please refer to the below contents.

RX : Green Lamp.

TX : Red Lamp.

CTCSS, DCS Error : Green Blinks.

Low Battery: Red Blinks with "beep" sound.

## 5. Basic Operation of XU/XV-1000 Series Radio

Please read this manual carefully before using XU/XV-1000 series Radio. This manual contains important information about using Radio.

### 5.1 Installation and Removal of the Antenna

To install the antenna, insert the antenna into antenna connector and screw the antenna clockwise. To remove the antenna, screw the antenna counter clockwise.

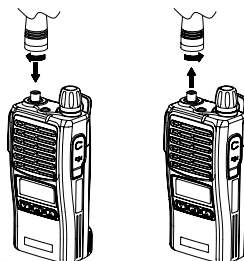


figure 5-1) Installation and Removal of the Antenna



When installation of the antenna, giving a strong pressure to the Radio or pulling the antenna with a strong power from the Radio can make a damage on the antenna connector, which may cause the Radio to have a critical problem.

### 5.2 Installation and Removal of the Battery

#### 5.2.1 Installation of the battery

To install battery, slide up the battery towards the top of the radio until battery latch is locked.

#### 5.2.2 Removing the Battery

- Slide the battery latch located on the bottom of radio to the open position as shown in figure 5-2.

- The battery is removed by pressing it against and sliding it towards the bottom of the radio.

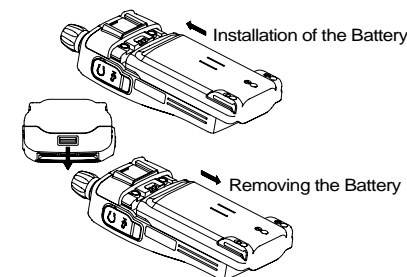


figure 5-2) Installation and Removal of the Battery

### 5.3 Installation and Removal of the Belt Clip

- To attach belt clip to radio, align belt clip rails with the grooves in radio and slide the belt clip onto the mounting rails until it latches into place.
- To remove belt clip from radio, push up on tab of belt clip with flat bladed screwdriver and at the same time, slide the belt clip towards the top of Radio (figure 5-3).

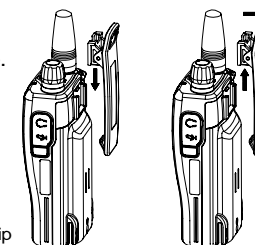


figure 5-3) Installation and Removal of the Belt Clip

### 5.4 Accessory connector

Accessory connector is used to connect external speaker/mic, and headsets, etc. Please close the cap when nothing is connected.

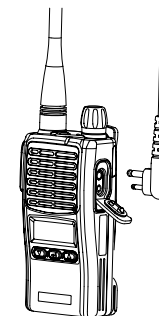


figure 5-4) Accessory connector

## 6. Charging the Battery

### 6.1 Safety Notes

- 1) The radio of XU/XV-1000 series receives power from high-performance Li-ion battery (XSB-2400). XSB-2400 Battery is safe of high performance and highly reliable, and could be charged very fast. XSB-2400 Battery has been designed suitably only for the charger of Tekk International Inc (DC-1000).



The charging of the enclosed Radio on the other maker's charger will cause damage to the battery and the Radio.

- 2) Please charge the battery before using the radio for best performance and safety.
- 3) When you charge the battery that is installed in the Radio, please turn off the radio first to charge the battery.



The continuous rapid discharge (for example, when making a short circuit on the '+, -' terminals of battery by a metal substance) may make a fatal defect and the battery can be exploded. Also, it can cause a fire.

- 4) Using the correct battery will improve the efficiency and safety.

### 6.2 The Time of Charging

Low battery voltage will make the radio have less coverage and also make the performance worse. Please charge the battery in case of following:

- 1) When you think performance of the radio becomes lower
- 2) When the red lamp on RX/ TX Led blinks (every 0.5 second) during transmission or reception
- 3) When the battery icon blinks
- 4) When "beep" sound is generated while the radio is in use.

### 6.3 How to Charge

- 1) Plug the Adaptor for DC-1000 charger into the electricity power outlet.
- 2) When charging the Radio with the battery installed, please turn off the power of the Radio and place the Radio on the charger (The charger has a slide slot.).
- 3) After completion of the charging, the green LED on the charger will light. However, please continue the charging for 30 more minutes for the complete full charge.

status	During charging	When charging	After charging	Detecting error
LED Indication	Red LED lights	Green LED lights	Green LED lights	Red LED blinks



figure 6-1) Charging the Battery

### 6.4 Charger (DC-1000)

The DC-1000 charger is designed to charge only the Li-ion battery enclosed in this Radio.



figure 6-2) DC-1000

#### Specifications of DC-1000 Charger / Adaptor

- INPUT VOLTAGE : DC85 ~ 250V
- BATTERY : XSB-2400
- QUICK CHARGING TIME : In 4 and half hours
- OPERATION TEMPERATURE : 0 ~+50
- SIZE : 90(W)x105(D)x37(H)m/m
- Charging Current : 850mA(Fast charging)

## 7. Operating Instructions of XU/XV-1000 Series Radio

### 7.1 Power On/Off

Turn Power switch clockwise. As soon as power is supplied, the backlight will be turned on. If the user had set up the user ID, it will be displayed on the LCD and radio will enter into the latest state as a signal sound is generated.



When turning (power) on the radio by pressing a button on it, the radio may enter into a special modes in which transmission and reception is impossible. Please don't turn on the radio by above way.



figure 7-1) User ID

### 7.2 Transmission Method

For transmission, press PTT button on the left side of the radio. As soon as the user presses keys according to the setting, DTMF or 5-tone ID will be transmitted, and during this time, voice communication will be interrupted for several seconds. Then, red LEDs for transmission and reception will be turned on. It is recommended to talk 5 ~ 10cm away from the microphone for the best voice communication.

Note: If the user makes transmission for more than a certain time while BCLO or TOT feature is on, transmission will be forcefully disconnected for other users.



If present channel is TX Inhibited by pc program, TX will not be worked. (By PC Program, it could be set.)




figure 7-2) When receiving




figure 7-3) When transmitting

### 7.3 Reception Method

The user should not press PTT button during the reception. The user can adjust the volume by Volume switch, and during reception, the green LED will be turned on. Depending on conditions of the transmitting radio.

### 7.4 Changing Channels

Channel buttons ( , ) are to change channels. Press Up button ( ). Then, "beep" sound will be generated and the channel number will be increased. Or press Down button ( ) to decrease the channel. If the user presses Up or Down button while only one channel is set, the channel will not be changed and a different sound from "beep" will be generated. For fast increase or decrease channel numbers, press Channel buttons ( , ) for a while. In this case, however, "beep" sound will not be generated.

### 7.5 Adjusting the Transmission Power

The user can change the transmission power - High Power or Low Power. By pressing Up button ( ) while PTT button is being pressed, the user can select "H" (High Power), or by pressing Down button ( ), the user can select "L" (Low Power). By selecting Low power under good communication conditions, the user can extend the battery use time.




figure 7-4) High Power




figure 7-5) Low Power

### 7.6 Operation of Scan function

By pressing Menu Button (P) and Enter Button ( ) in order within 0.5 second in Standby mode, the user can activate Scan function. After Scan function is activated, the radio will automatically search channels and detect a channel corresponding to the frequency. To deactivate Scan function, press Menu Button (P) once.


#### 7.6.1 Normal Scan

At the Scan mode, the LCD displays 'SCAN' icon. When the scan list is S1, S2, S3, the Radio proceeds the channel scan in the sequence of S1, S2, S3, S1, S2,... During receiving a signal, if you press the UP ( ) or DOWN ( ) button, you can delete the receiving channel temporarily from the scan list and at that time, you can move to the next channel.




Channel 1 Channel 2 Channel 3 Channel 4 Channel 5 — Channel 8

## 7.6.2 Priority Scan

At the Priority Scan mode, the LCD displays 'SCAN' and 'P-' icons. The Radio scans the channel in the sequence of P, S1, P, S2, P, S3,... at the priority scan mode. During receiving signal through the common channel, the Radio scans the priority channel periodically and if the Radio detects the Priority channel, it starts receiving the channel. During receiving the signal, you can move to the following scan channel by pressing the UP( ) or DOWN button( ). If you press the Enter button(  ), you can erase the current receiving channel temporarily from the scan list and at that time, you can move to the next channel.

But in the course of receiving the Priority channel signal, you can not change or erase the channel by the UP/DOWN buttons( , ).

## 7.7 Key Lock function


During pressing the Menu button(P) at the receiving standby mode, press the UP button( ) within 0.5 second and then, the Key Lock function will be executed and the key icon(  ) of LCD will appear. At this situation, the other key except for the PTT and the Monitor key will not be operated. In order to release the Lock function, press the Menu button(P) and during pressing the button, press the DOWN button( ) within 0.5 second.

## 7.8 2TONE / 5TONE function

### 7.8.1 2TONE

You can use the private and group tone functions by the central control system which is using the 2TONE SIGNALING. If the Radio receives the tone signal, the Radio will make a Beep sound which is advising the tone signal status and which means the Radio is ready to talk.

### 7.8.2 5TONE

At the tone mode, you can make the private & group calls by the 5TONE and each call memory has the call IDs up to 30 numbers. The set-up of call memory and 5-TONE is made by PC programming. If pressing the Enter button(  ) for 2 seconds at the general mode, the Radio is converted to the call mode and if pressing the Menu button(P) for 2 seconds at the call mode, the Radio is converted to the general mode. By using the channel buttons( , ) at the call mode, the call number of a channel which is available for the call is displayed.





figure 7-6) General Mode



figure 7-7) Call Mode

### 1) 1:1 Call at call mode

Press the Enter button(  ) for a long period(about 2 seconds) at the general mode in order to enter into the call mode.

Select your party to call by using the channel buttons( , ). If you ( ID : 12345 ) want to call your party(ID : 54321), select him(ID : 54321) by using the channel buttons( , ) at the call mode.




figure 7-8) ID Selection


You can call the party (ID : 54321) by pressing the Enter button(  ) and then, the Radio of your party(ID:54321) displays the ID number "12345". Even though your party's Radio is in general mode, the Radio will be converted to the call mode automatically.



figure 7-9) ID Transmission

After the call is completed, the Transmission and the Reception have no restriction, which means that the RX/TX will be free.

### 2) Group(1:N) Call at call mode

In order to make the Group call at the call mode, the following should be set up at the PC programming.

If the 1<sup>st</sup> party (ID:53579) and the 2<sup>nd</sup> party(ID:52468) are in one group, the "5AAAA" which is a call number / call name(example : baseball player) should be designated. ("A" means that all the numbers are applied.)

If the caller makes a call to the group of baseball players, the caller's Radio should press the Menu Button(P) and Up button( ) at the same time after selecting the party with ID "1AAAA". In this case, the Radios of the party1 and the party 2 display the ID "1AAAA". In case of the group call, the party's Radio displays the group ID number.

After the call is completed, the Transmission and the Reception have no restriction, which means that the RX/TX will be free.




figure 7-10) Group Call



### 3) RESET

This Reset function converts the RX/TX with no restriction to the previous Close mode. the Monitor button (M) at the call mode.

The call signal will be transmitted to the party's Radio with the ID number "C" tone. If the party's Radio is in the Close channel and after receiving the call with the "C" tone, the call is converted to the "RX/TX with no restriction" mode.

## 7.9 Emergency Call function

- 1) This Emergency call is used for calling the party in emergency and if pressing for about 2 seconds the button in Red color on the top side of Radio, the Emergency Call is transmitted.

In case of setting to the emergency call channel (available by PC programming) with your ID at the general mode or if the Radio is in the call mode, you can make an Emergency Call by pressing the button in Red color for about 2 seconds.

The transmission is sent with the "C" tone after your ID number.

The party's Radio receives the "C" tone along with your ID number. The Radio recognizes it as an emergency call and displays your ID number with the consecutive alarm sound.

- 2) Without transmitting the emergency call to the party, the Radio itself makes the emergency call sound continuously.

## 7.10 STUN function

The Radio is lost or in case you don't want someone to use your Radio, the reception of STUN ID saved in the Radio protects the Radio from the use by someone.

(The Stun ID can be set up by PC Program.) If the STUN ID is saved in the Radio, the Radio can't be used even after the power off & on of Radio. After receiving the UNSTUN ID, you can use the Radio.



figure 7-11) STUN Screen

## 7.11 Programming function

The Programming is the function for input of the data such as Frequency/Tone/Scan into the Radio.

### \* Programming Method

First, please prepare the Program cable for XU/XV-1000 Series Radio.

Press the "P" button of the Radio to turn on. Then, the -Prog- message is displayed.

Connect the Programming cable to the Ear/Microphone Jack of Radio.

By using the PC Program, store the data and after disconnecting the cable, turn off the power and turn on the power again.




figure 7-12) Program Screen

## 7.12 Cloning function

The CLONING is to copy the data such as Frequency/Tone/Scan into the other Radio.


### \* Cloning Method

First, please prepare the Cloning cable for XU/XV-1000 Series Radio.

The original Radio should be turned on with pressing the PTT button and the Radio to be copied should be turned on with pressing the Menu button(P) .

The original Radio displays -CLON- message, and the Radio to be copied displays Prog- message.

Connect the Clon cable to the Ear/Mic Jack of 2 Radios.

If pressing the Enter button(  ) of the original Radio, the copy is made and after completing, please disconnect the cable and turn off & on the power of the 2 Radios.

Finally please use the Radio after checking if the copy is made without problem.



If the Cloning is made into the other maker's Radio, a malfunction can happen.

original



copy



figure 7-13) CLON Screen

## 7.13 Menu description

If pressing the Menu button(P) on the side for 2 seconds, the Radio will be in Menu mode.

The Menu mode consists of 9 Menus and you can use your desired Menu after selection.



After entering into the Menu, if you don't operate the Menu for more than 8 seconds, the Menu mode will be terminated automatically and it is converted to the Receiving mode.

### 7.13.1 Compander selection

This Compander selection is for On( 𐄂 )/Off( 𐄃 ) of the Compander.

The selection can be made by the PC program and at the Menu.

Enter into the Menu mode.

By using the channel buttons ( , ), choose the "Comp" and press the Enter button ( ↵ ).

Comp

By using the channel buttons ( , ), choose the ON( 𐄂 ) or the OFF( 𐄃 ) and press the Enter button( ↵ ) to store.

In order to come out of the Menu mode, press the Menu button(P) and by selecting the On( 𐄂 )/Off( 𐄃 ), the Compander ICON( 𐄂𐄃 ) on LCD appears/disappears.

Comp 𐄂 𐄂𐄃    Comp 𐄃 𐄂𐄃

### 7.13.2 Group change

The Radio is designed to have total 512 channels and 16 Groups and the selection of each Group & Channel can be available by PC program and Menu.

Enter into the Menu mode.

By using the channel buttons ( , ), choose the "Group" and press the Enter button ( ↵ ).

Group

Using the channel buttons ( , ), choose the Group and press the Enter button( ↵ ) to store.

Group 01

In order to come out of the Menu mode, press the Menu button(P).

### 7.13.3 ID output

This is for transmission of your ID and reception of your party's ID. ID is divided by DTMF and Call ID. Especially the Call ID transmits your ID to the party and also, the party's ID is displayed on your Radio to use your Radio in convenience and efficiently.

Choose the "Id ANI" by the channel buttons ( , ) and press the Enter button( ↵ ).

Id ANI

After the "d-TON" message comes out, choose the ON( 𐄂 )/OFF( 𐄃 ) by the channel buttons ( , ) and press the Enter button( ↵ ).

d-TON 𐄂

d-TON 𐄃

After the "C-TON" message comes out, choose the ON( 𐄂 )/OFF( 𐄃 ) by the channel buttons ( , ) and press the Enter button( ↵ ).

C-TON 𐄂

C-TON 𐄃

Comes out of the Menu mode by pressing the Menu button(P).

### 7.13.4 Scramble selection

The Scramble is for protection from overhearing and the scramble reverses the voice signal from microphone to a specific frequency and a mixed voice in order for the other person not to hear your voice.

The selection can be available by PC program and Menu.

Enter into Menu mode.

Select "SCrA" by pressing Channel buttons ( , ), and press Enter button( ↵ ).

SCrA

Select On( 𐄂 ) or Off( 𐄃 ) by pressing Channel buttons ( , ), and save the selected status by pressing Enter button( ↵ ).

SCrA 𐄂 SCR

SCrA 𐄃

Exit Menu mode by pressing Menu Button(P) button. Select Off( 𐄃 ). Then, the " SCR" symbol will disappear on the LCD.

### 7.13.5 Set Squelch

Squelch sensitivity level is selectable by 5 steps.

By PC Program and menu, it could be set.

Enter into Menu mode.

Select "SQUELCH" by pressing Channel buttons ( , ), and press Enter button( ).

Then, the message of the squelch sensitivity will be displayed.

Select squelch sensitivity -0~5- by pressing Channel buttons ( , ), and press Enter button( ) to save the level

Exit Menu mode by pressing Menu Button(P).

### 7.13.6 Set KEY Sound

Set Key Sound menu is to decide whether to generate sound or not when the user presses four buttons . ( , , P)

By PC Program and menu, it could be set.

Enter into Menu mode.

Select "Sound" by pressing Channel buttons ( , ), and press Enter button( ).

Select On( ) or Off( ) by pressing Channel buttons ( , ), and save the selected status by pressing Enter button( ).

Exit Menu mode by pressing Menu Button(P) button. Select Off( ). Then, the( ) symbol will disappear on the LCD.

### 7.13.7 Set VOX

Set VOX is to enable users to make transmission for VOX without pressing PTT button. (This function could be available with Ear Mic [External VOX]).

By PC Program and menu, it could be set.

Enter into Menu mode.

Select "H-FrEE" by pressing Channel buttons ( , ), and press Enter button( ).

Select On( ) or Off( ) by pressing Channel buttons ( , ), and press Enter button ( ).

Select on( ). Then, the "vox , H-Fr 05" symbol s will appear on the LCD.

Set sensitivity by pressing Channel buttons ( , ), and press Enter button( ).

Select Off( ). Then, the "vox" symbol will disappear on the LCD.

Exit Menu mode by pressing Menu Button(P) button.

### 7.13.8 Set Lone Worker


The Set Lone Worker is for transmission of emergency alarm sound without pressing the designated button within a period of time when night patrol or guarding and the Lone Worker can be set to be ON( )/OFF( ).

The selection can be available by PC program and Menu.

Enter into Menu mode.

Select "LONE W" by pressing Channel buttons ( , ), and press Enter button( ).

Select On( ȳ ) or Off( Ꞥ ) by pressing Channel buttons ( , ), and save the selected status by pressing Enter button( ↵ ).



Exit Menu mode by pressing Menu Button(P) button.

### 7.13.9 Set Repeater

If you want to use the XU/XV-1000 Series Radio as a repeater, you can operate the Repeater by On( ȳ ) / Off( Ꞥ ) .

The Repeater function should be set up by PC program and if not, at the Menu mode the Repeater set-up is not shown.


When setting the Repeater function, please make sure to use Tone Code.

Enter into Menu mode.

Select "REPEAT" by pressing Channel buttons ( , ), and press Enter button( ↵ ).



Select On( ȳ ) or Off( Ꞥ ) by pressing Channel buttons ( , ), and save the selected status by pressing Enter button( ↵ ).



Exit Menu mode by pressing Menu Button (P). Select Off( Ꞥ ). Then, the " ȳ " symbol will disappear on the LCD.